

INSTRUCTIONS FOR REPLACING HEATERS IN THE FREEZER COUNTERS (PZ)

Freezer counters PZ1, PZ2, PZ3, PZ4



Before use, carefully read this original instructions for replacement heaters in the freezer counters.

Following the original instructions will help you to understand how to replace the heaters in the freezer counters.



CAUTION!

Failure to follow the original instructions can lead to improper use and damage to the freezer counters.

1. Remove the mask and all equipment



Warning! All drawers should be returned to the same place after the replacement!

2. Remove all cover profiles



We help us with a flat-blade screwdriver.



We always open only one side of the profile

3. Remove the intermediate posts



4. Remove the old heater.



5. Make grooves for mounting a new heater

In the corner

For intermediate pillars



For the pillar

For the pass
the heater in
the pillar




It is necessary to
drill 2x fi8 holes
into pillar

6. Insert a new heater.



Insert it into the channel

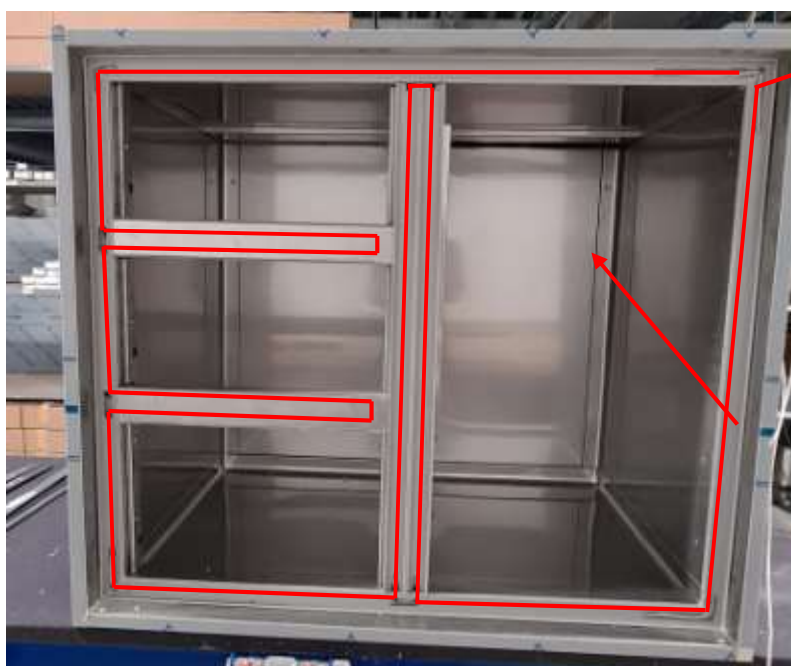

Leave the heater finish in the
channel

7. All openings in the profiles needs to be insulated with duct tape.



8. After replacing the heater, assemble everything back to its original condition!